



# 7 Series ActiveHybrid 7 F04 (since 04/2010)

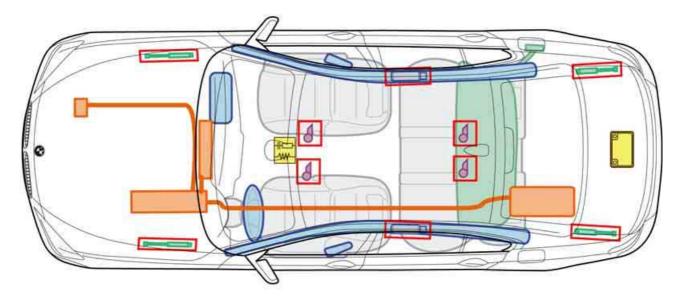

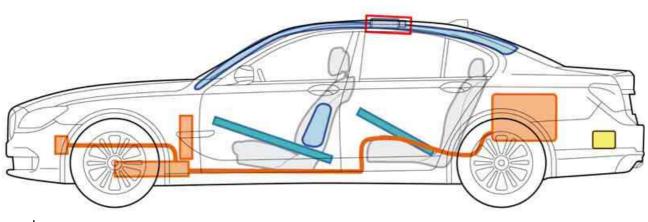





## Legend

0	Airbag		Bodywork reinforcements	#C-	Airbag control unit
	Gas generator	<del>a</del>	Gas pressure damper	<u> </u>	12-Volt battery
4	Belt tensioner		Fuel tank		High-voltage components

This overview shows the maximum vehicle equipment.



# **Special features:**

High-voltage system with DC voltage up to 130 Volts! Do not touch high-voltage components. For labelling characteristics and details, see reverse!

### Labelling characteristics:

"ActiveHybrid" logo on the tailgate, side wall and front door sill cover strips.









#### Remarks:

## The negative terminal of the 12 Volt battery must be disconnected.

- Disconnecting the negative terminal of the 12 Volt battery automatically disables the highvoltage system.
- In the event of an accident in which the airbag is triggered, the high-voltage system is also disabled.



#### Risk of death!

Do not touch high-voltage components.

The high-voltage battery is located under the luggage compartment trim panel.

Labelling of the high-voltage battery:



Labelling of the other high-voltage components:

