



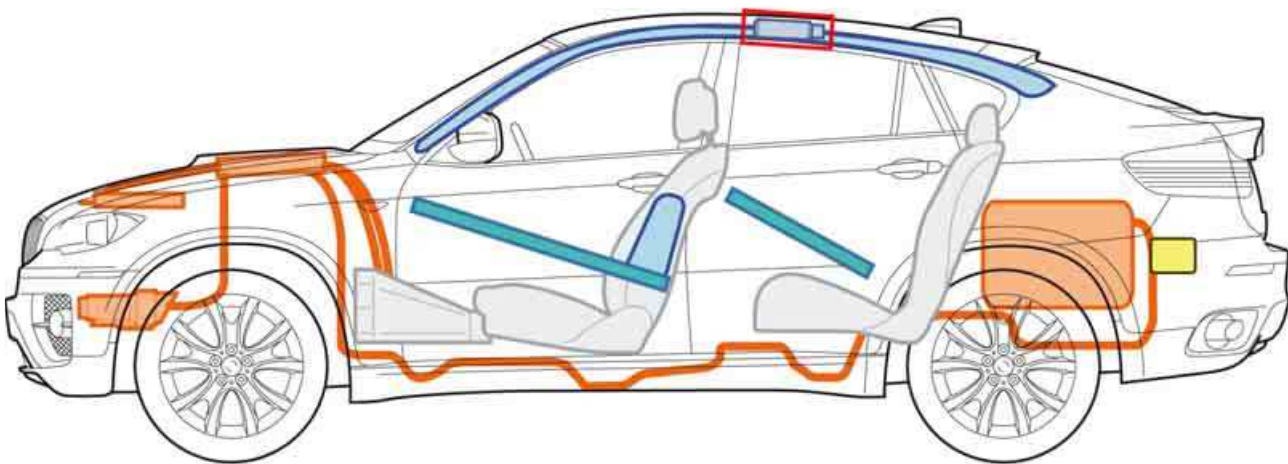

X6 ActiveHybrid E72

(since 10/2009)

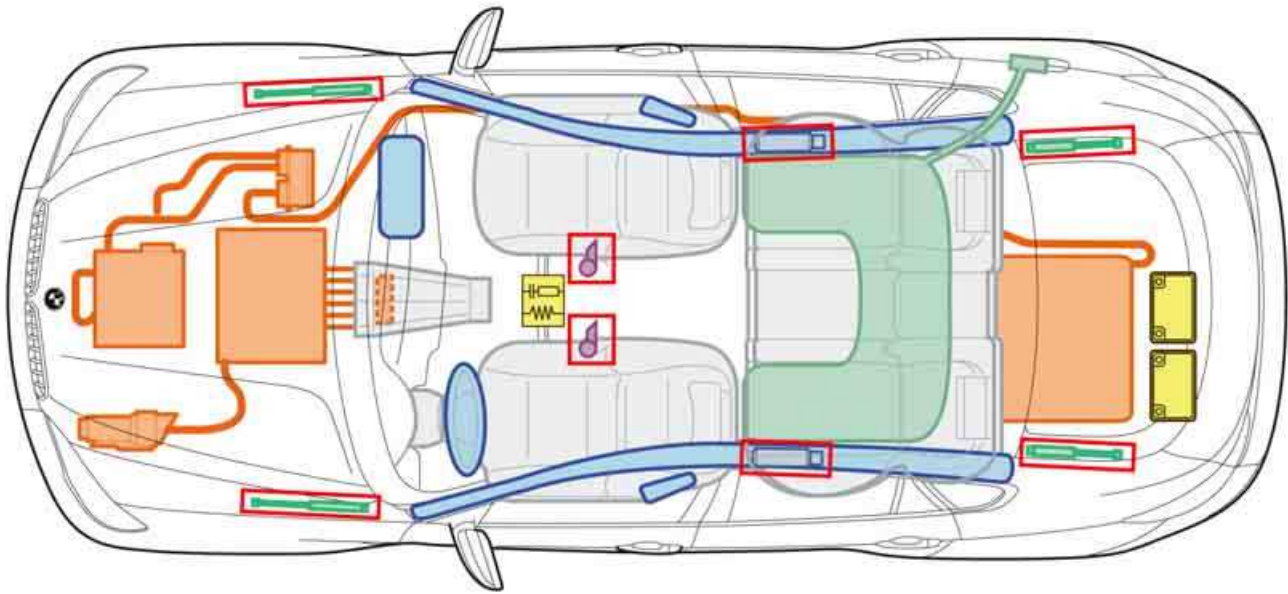

BMW Saloon






 



BMW Coupé/Compact

BMW Touring


BMW Convertible

BMW SAV X6

Legend

	Airbag		Bodywork reinforcements		Airbag control unit
	Gas generator		Gas pressure damper		12-Volt battery
	Belt tensioner		Fuel tank		High-voltage components

This overview shows the maximum vehicle equipment.



Special features:
 High-voltage system with DC voltage up to 650 Volts! Do not touch high-voltage components.
 For ActiveHybrid labelling characteristics and details, see reverse!

Labelling characteristics:

- Scoop on the engine compartment lid, see arrow.
- “ActiveHybrid” logo on the tailgate and front side wall.



	<p>Remarks:</p> <p>The negative terminal of the 12 Volt battery must be disconnected.</p> <ul style="list-style-type: none"> • Disconnecting the negative terminal of the 12 Volt battery automatically disables the high-voltage system. • In the event of an accident in which the airbag is triggered, the high-voltage system is also disabled.
--	---

	<p>Risk of death!</p> <p>Do not touch high-voltage components.</p>
--	---

The high-voltage battery is located under the luggage compartment trim panel.

Labelling of the high-voltage battery:



Labelling of the other high-voltage components:

