


**41. REMOVE MAP LIGHT ASSEMBLY**

- (a) Remove the 2 screws.
- (b) Using a moulding remover, detach the 4 clips and remove the map light.
- (c) Disconnect the map light connector.

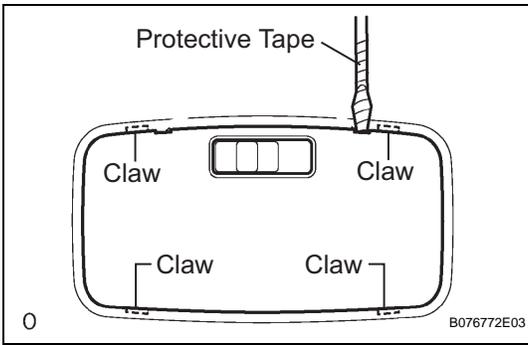


**42. REMOVE NO. 1 ROOM LIGHT ASSEMBLY**

- (a) Using a screwdriver, detach the 4 claws and remove the room light lens.

HINT:

Tape the screwdriver tip before use.

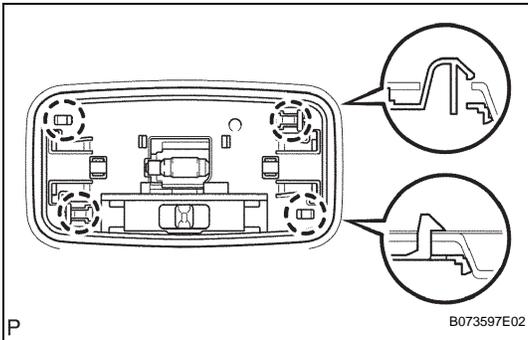


- (b) Using a screwdriver, detach the 4 claws and remove the room light.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the room light connector.

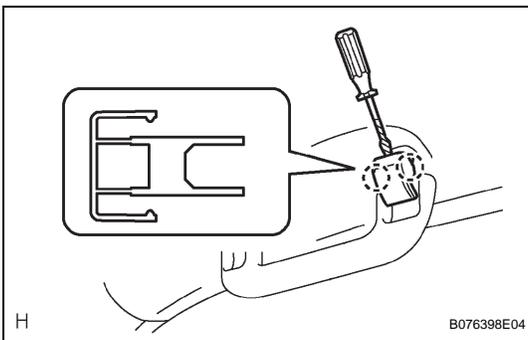

**43. REMOVE ASSIST GRIP COVER**

- (a) Using a screwdriver, detach the 4 claws and remove the 2 covers.

HINT:

Tape the screwdriver tip before use.